

Manual Release

When manual operation is required:

1. Inset the special Key provided and rotate 180°.
2. To reengage the gear, rotate the Key 180° in the opposite direction.

DO NOT rotate the release mechanism in any direction while the motor is running.

