


**MANUAL RELEASE INSTRUCTIONS**

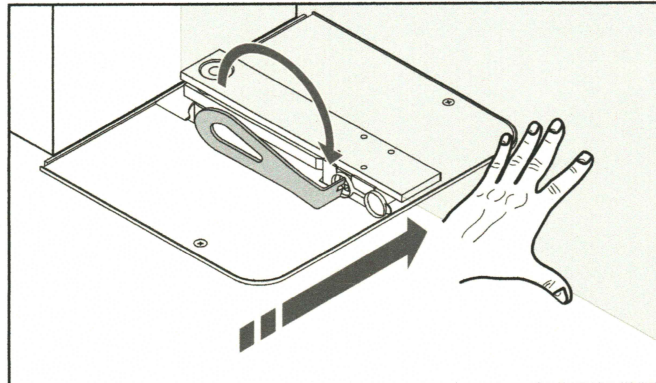

**In the event of failure or if there is no voltage:**

CUBIC6SBL: Insert the lock release key in the lock and rotate by 180°. Release any electric lock. Manually open the gate.

To block the door wings again: rotate the lock release lever or key by 180°. Move the door wing manually until it is completely reattached.