

EMERGENCY RELEASE

In case of power failure, push the cover of release compartment and slide forward. Insert the key and turn clockwise to unlock, then turn the knob clockwise to release. To latch back to normal operation, simply reverse the procedures above.

Step1. Push the cover of release compartment and slide forward

Step2. Insert the key and turn clockwise to the unlock position

Step3. Turn the knob clockwise to release the motor.

Make sure the white bar on the knob is on the position opposite to the triangle indication.

To restore the automation, simply reverse the above procedure.

