

## Manual Release

When manual operation is required:

1. Use the attached Key to rotate the gear release mechanism counter-clockwise.
2. To reengage the gear, rotate the gear release mechanism clockwise.

**DO NOT rotate the gear release mechanism in any direction while the motor is running.**

