

Manual Release

When manual operation is required:

1. Unlock and remove the Top Cover with the Key or optional Thumb Screw.
2. Press the Manual Release Switch to the “RELEASE” Position.

**The gate can now be moved manually.
To resume normal operation, press
the switch to the “ENGAGE” position.**

